



- X **DO NOT** place the heater up against any surface such as a wall, door or furniture etc.
- X **DO NOT** place the heater immediately below any electrical outlet.
- X **DO NOT** allow the power lead to touch the radiator surface.
- X **DO NOT** attempt to repair a damaged heater, contact an authorised service agent.
- X **DO NOT** stand on the heater.
- X **DO NOT** connect the heater to a timer device or other equipment than can automatically switch the heater on or off.
- ✓ Only use the heater in an upright position.
- ✓ Ensure that the heater is correctly turned off when not in use and store in a safe, dry, childproof location.

**NOTE:** This appliance cannot be used by those aged under 18 years or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## 2. INTRODUCTION

Electric fan heater for industrial applications. Two heat settings with thermostat control, plus fan only setting. A totally dry heat with no condensation, no gas, no fumes, so no smell. Ideal for workshops, garages etc.


## 3. SPECIFICATION

Model: ..... **Olympus OLY-J3/1**  
 Voltage: ..... 230V~50Hz  
 Power rating: ..... 3000W  
 Heat Settings: ..... 25W/1500W/3000W  
 Dimensions (W x D x H): ..... 315 x 330 x 400mm  
 Fuse: ..... 13A

**IMPORTANT!** This unit is designed to raise the ambient temperature of an entire room, the temperature of the air coming out of the front of the heater will be warmer than the general temperature of the room, but there may not be a significant increase due to the large volume of air passing over the element. For the same reason, the element is hot during operation, but does not glow visibly. The room temperature depends on room size, insulation and the ambient temperature, which will increase as the room gets warmer.

## 4. OPERATION

- 4.1. Position heater in an upright position on a firm surface and at a safe distance from any obstructions, flammable substances etc. Keep to a minimum of 0.5mtr clearance at the rear and sides, and 2mtr clearance at the front.
  - 4.2. Connect the heater to a suitable mains supply.
  - 4.3. Set the thermostat dial to the maximum setting (fully clockwise).
  - 4.4. The heater will switch on when the power setting selector is set to one of the two power settings.
- NOTE:** It will take up to three minutes for the heater to reach optimum temperature.
- 4.5. Once the room reaches the required temperature, turn the thermostat dial slowly counter-clockwise until the thermostat clicks, leave the dial in this position and the room temperature will be maintained at this setting. The heater will continue to operate until the power switch is turned to the OFF position.
  - 4.6. For fan only operation, turn the power/fan selector to the fan only setting and set the thermostat to its minimum setting.
  - 4.7. When not in use, disconnect the heater from the mains supply. Store it in a safe, dry, childproof location.

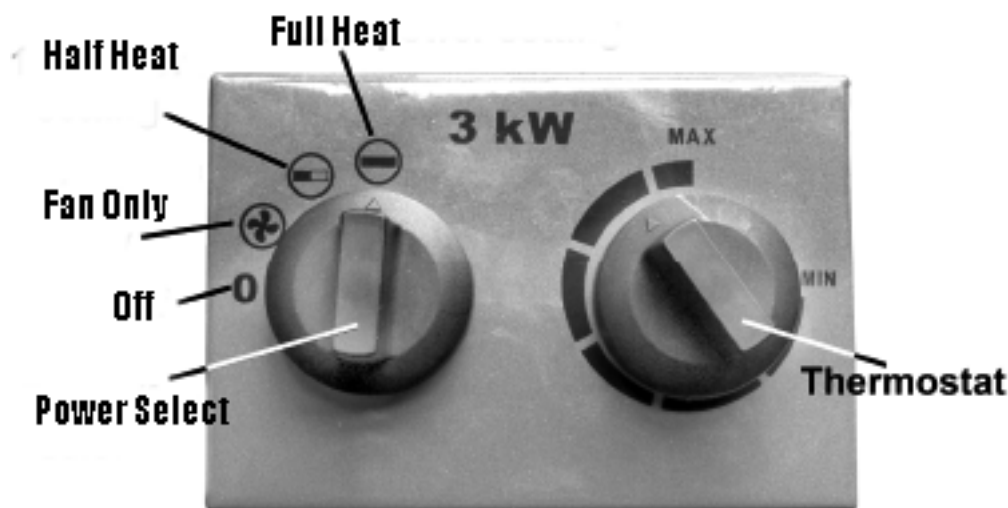

## 5. MAINTENANCE

- ❑ **WARNING!** Before attempting any maintenance, ensure that the unit is unplugged from the mains power supply and that it has cooled down.
- 5.1. Clean the heater with a soft dry cloth only. **DO NOT** use abrasives or solvents.
  - 5.2. Periodically check the heater grille to ensure that it is not blocked.
  - 5.3. No other maintenance is necessary. If a problem with the heater is experienced, or if the power lead or plug is damaged, contact your local authorised service agent for repair. **DO NOT** dismantle or tamper with the heater, as this may be dangerous and will invalidate the warranty.
- NOTE:** It can take up to three minutes for the heater elements to reach optimum temperature.

